

Swipe with confidence


The ROAMpay Swipe is small enough to carry in your pocket and fits in your device's audio input jack. No bulky attachments. No special adapters. Take advantage of the lowest card present rates and end-to-end encryption. This Swiper works on iPhones and select Androids.

Instructions for use:

- 1) Take ROAMpay swiper (#1011) out of case
- 3) Plug device into audio headset jack
- 4) Open ROAMpay application on your phone
- 5) On credit card input screen, press "Swipe" button
- 5) Ensure media volume is at 100% before swiping.
Note: Ringer volume is different from media volume.
- 6) Swipe card when prompted



Make sure swiper is completely plugged in and headset/media volume is set to max

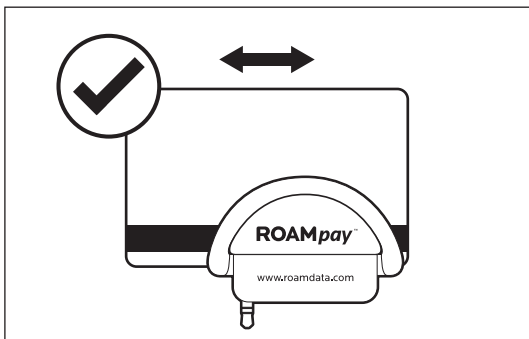

Make sure the card's magstripe is facing the correct direction

Troubleshooting**Why does my device not work even when I maximize the volume on my phone?**

- (a) Press "Swipe Now" in the app and then maximize volume. On some phone models, Ringer volume is different from Headset volume. Headset volume must be maxed.
- (b) If your phone has a protective sleeve, check to make sure the sleeve isn't preventing the device from being plugged in all the way.
- (c) Make sure your speakerphone is turned off before swiping.
- (d) Make sure the magstripe is facing the right direction. If you are looking at the front of your swiper, you should also be looking at the magstripe.

Need help?

<http://www.roamdata.com/swiper>
Customer Care – 1.888.589.5885 + option 2
support@roamdata.com

Follow us:

<http://www.roamdata.com/facebook>
<http://twitter.com/roamdata>
<http://blog.roamdata.com>